MANUALWORKPOSITIONER Ergo Master®



Description

This versatile and safe work positioner enables you to move work to any suitable work position with easy height adjustment, 360° rotation and tilt.

Application

Ergo Master is ideal for secure positioning of any object for any project, no matter what size or shape. This manual work positioner offers unlimited applications in any industry and is advantageous in any shop floor or work

Ergonomic Benefit

- Eliminate employee strain, fatigue and injury.
- Create a safer and more productive work environment.

Standard Features

- Designed and built in the USA for the most robust and heavy-duty applications.
- Offers full flexibility to move work to any work positions.
- · Adaptable to any work fixtures.
- Solid aluminum construction with stainless steel ball.
- Available in bench (2 axis) or floor pillar mount (3 axis) configurations.
- Four standard load classes: 50 lbs., 150 lbs., 300 lbs., 400 lbs. (2-axis only).
- Provides a positive, safe and secure position lock instantaneously in any desired work position.
- Operator adjustable friction resistance ensures a smooth and balanced transition between positions.
- One foot pedal controls the height position adjustment while the other foot pedal provides release of ball for easy tilt and rotation.

Options

- Slot in top block for 90° tilt.
- · Protective dust and weld covers.
- Turn-table with 8 slots.
- Welding ground lug.
- · Base casters.

Other Ergo Masters







Bench Mount

Application Examples










TECHNICALINFORMATION


2-Axis (Tilt & Rotation) Bench Mount ERGO MASTER

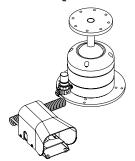

Model	Max. Dynamic Capacity (lbs.)	Cylinder Diameter (in.)		Overall Height w/Fixture Plate (in.)	Fixture Plate Mounting Hole Pattern	*Base Plate Mounting Hole Pattern		
EM50-F	50	37/8	31/2	5 3/4	(4) 9/3" dia. holes on a 2.375" dia. Bolt Circle	(4) $^9/_{32}$ " dia. holes on a 4.50" dia. Bolt Circle		
EM50-V**	50	37/8	31/2	81/4	N/A	(4) $9/_{32}$ " dia. holes on a 4.50" dia. Bolt Circle		
EM150	150	6 ⁷ / ₁₆	6 ¹ / ₈		(8) $\frac{3}{8}$ " 16 tapped holes on a 5.00" dia. Bolt Circle			
EM300	300	77/8	6 ⁷ / ₈	12 7/8	(8) $^{3}/_{8}$ " 16 tapped holes on a 5.00" dia. Bolt Circle	(4) $9/_{32}$ " dia. holes on a 8.75" dia. Bolt Circle		

^{*}For fastening, use bolts with minimum hardness grade of at least 8.8. Screw in at least 1" deep.

3-Axis (Up/Down, Tilt & Rotation) Floor Mount ERGO MASTER

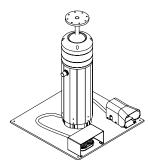

Model	Max. Dynamic Capacity (lbs.)	Retracted Height (in.)	Max. Height (in.)	Stroke (in.)	Pillar Sections	Lift Speed (in./sec.)	Pillar Voltage (V)	Pillar Amperage (A)	Pillar Duty Cycle (at 68°F)
EM153	150	30 ³/ ₄	42 3/4	12	2	1.2	110/60Hz	5.0	Intermittent Service 20%
EM153-PNEUM	150	34 ³/ ₄	50 ³/ ₄	12	2	Adjustable	-	-	100%
EM154	150	34 ³/ ₄	50 ³/ ₄	16	2	1.2	110/60Hz	5.0	Intermittent Service 20%
EM303	300	32 ³/ ₈	44 3/8	12	2	1.2	110/60Hz	5.0	Intermittent Service 20%
EM303-PNEUM	300	36 ³/ ₈	52 ³/ ₈	12	2	Adjustable	-	-	100%
EM304	300	36 ³/ ₈	52 ³/ ₈	16	2	1.2	110/60Hz	5.0	Intermittent Service 20%

For fastening to floor, use bolts with minimum hardness grade of at least 8.8. Screw in at least 1" deep.


1-Axis (Rotation) Bench Mount ERGO MASTER



Model	Max. Dynamic Capacity (lbs.)	Height (in.)			Turntable Slot Size	Bolt Head Opening (in.)	*Mounting Hole Pattern	
EM400	400	3 3/4	15 5/8	5/8	(8) 0.39" wide 45° apart	0.68	(4) 3/32" dia. holes on a 7.75" Bolt Circle	


^{*}For fastening, use bolts with minimum hardness grade of at least 8.8. Screw in at least 1" deep.

2-Axis (Up/Down & Rotation) Floor Mount ERGO MASTER

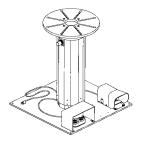

Model	Max. Dynamic Capacity (lbs.)	Retracted Height (in.)	Max. Height (in.)	Stroke (in.)	Pillar Sections	Lift Speed (in./sec.)	Pillar Voltage (V)	Pillar Amperage (A)	Pillar Duty Cycle (at 68°F)
EM403	400	23	35	12	2	1.2	110/60Hz	5.0	Intermittent Service 20%
EM403-PNEUM	400	27	43	12	2	Adjustable	-	-	100%
EM404	400	27	43	16	2	1.2	110/60Hz	5.0	Intermittent Service 20%

NOTE: All models operate from standard shop air at minimum 80 psi.

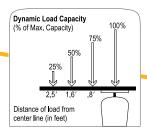

Industrial Ergonomics® 612-532-6774

sales@Industrial-Ergonomics.com





^{**} V indicates Vice mounted on top